

Thank you for choosing our fixed wireless phone. In order to use the phone better, please read these instructions carefully before use. The phone is designed using the latest 4G digital communication technology providing the following features:

Product Features

Screen backlight, support night lighting

Two-way SMS, voice calls and caller ID

Menu display

Stores 800 contacts and 600 call logs for viewing and returning calls

Supports 300 SMS messages

Supports up to 10 ring tone options. Mp3 can setting as ring tongs

Adjustable ring tone and volume

Supports hands-free calls and emergency calls

FM Mp3 Mute Record(should input TF card)

Supports charging status display


Supports charger only

Long battery life, long talk time

Support WIFI hotspot for 10 users at the same time

Packing list

- 1 Phone Body
- 2 Handset
- 3.Coiled cord
- 4. 1000mAh Li Battery
- 5. AC Adaptor 12V1A with DC5521/Type C port
- 6. TNC External Antenna
- 7. User Manual

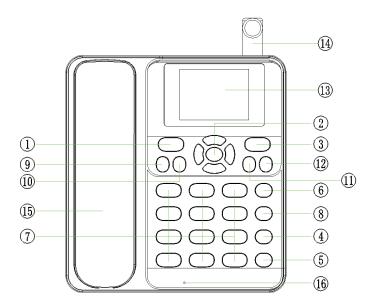

Left function key

- · At standby mode, press this button to enter the main menu
- · press this button to select the menu or operation corresponding to the text on the left side of the bottom of the screen.

2. Direction key

- · At standby mode, press OK to enter the main menu
- · At standby mode, press the arrow keys to enter the corresponding shortcut menu
- · At call modes, press the direction button to adjust the call volume

3. Right function key

 \cdot press this key to select the menu or operation corresponding to the text on the right side of the bottom of the screen

4. Power key

- · Close a call or reject a call
- · long press this button to turn on or off standby mode
- · At non-standby mode, press this button to return

5. Hands-free key

- · At standby mode, press this button to use speakerphone to make or receive calls
- · press this button to cancel or end a call at hands-free mode

6. Dial/Redial key

- · make or receive calls
- · At standby mode, press this button to check the call record

7. Number and symbol keys

- · enter Numbers or characters
- · At standby mode, long press 1-9 number keys for speed dial
- · At edit mode, press # key to switch input mode
- · At edit mode, press * to open the symbol list

8. WIFI key	· At standby mode, press this button to enter Wi-Fi menu
9. Mp3 key	· At standby mode, press this button to enter Wi-Fi menu
10. FM key	· At standby mode, press this button to enter Wi-Fi menu
11. Mute key	· At standby mode, press this key to Mute mode
12. Record key	· At standby mode, press this button to enter Calls menu
13. Mute key	13.128*64
14. Record key	· At standby mode, press this button to enter Calls menu
15. Mic	· Mic for Voice





